




DQ-17-1294

 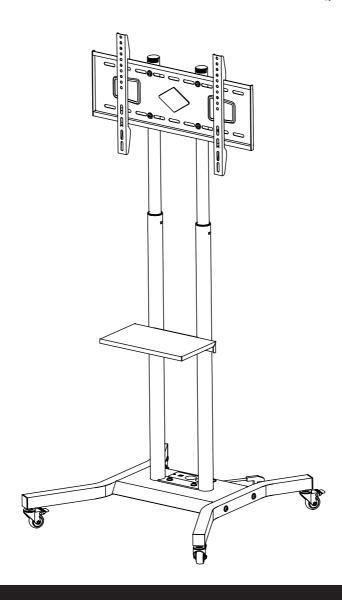


part list

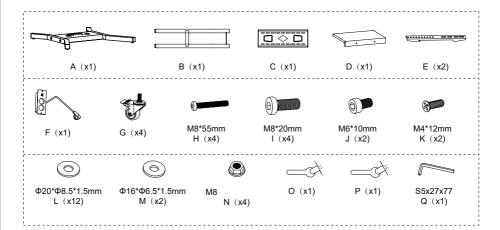


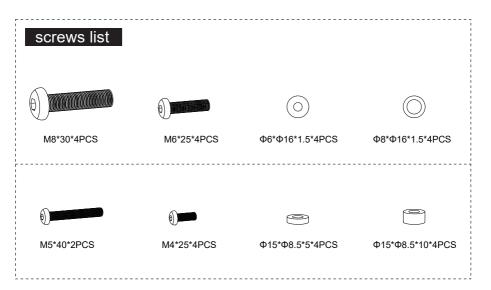


R*kit (TV Screws)




base (A) Use an open-end wrench (P) to lock the four universal wheels at the bottom. (G) $_{\circ}$ Then use two screws (K) to secure the socket strip (F) on the front of the base.

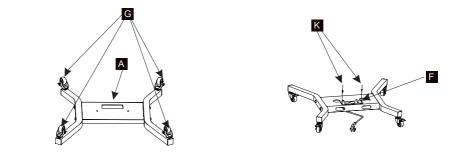

 
STEP 2





Insert the vertical pole and telescopic pole (B) into the base (A) and secure them with four screws (I) and four washers (L). After being secured, hold button the telescopic pole can adjust up and down in height.

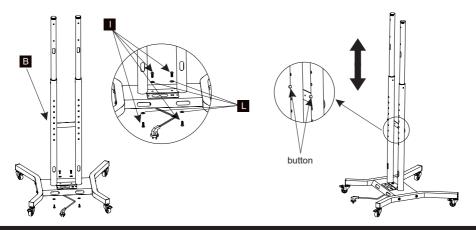


  STEP 3



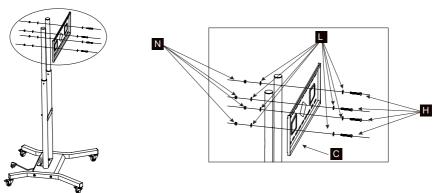



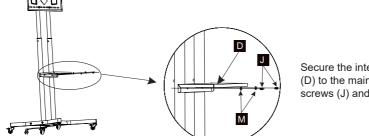

Secure the intermediate plate (D) to the main pipe with two screws (J) and two washers (M).

STEP 5





Screw the two wall-mount brackets (E) onto the TV using the screws in the screw bag (R*kit) that are suitable for the size of the TV. Then hang the wall-mount brackets on the assembled bracket and finally secure them with the two M5*40(R) screws in the screw bag.

