 
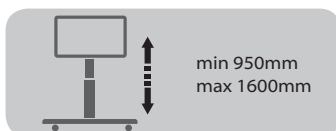 


XTRARM

INSTALLATION MANUAL

MOTORIZED TV CARTS

 
XTR -FS5000 / XTR -FS5010

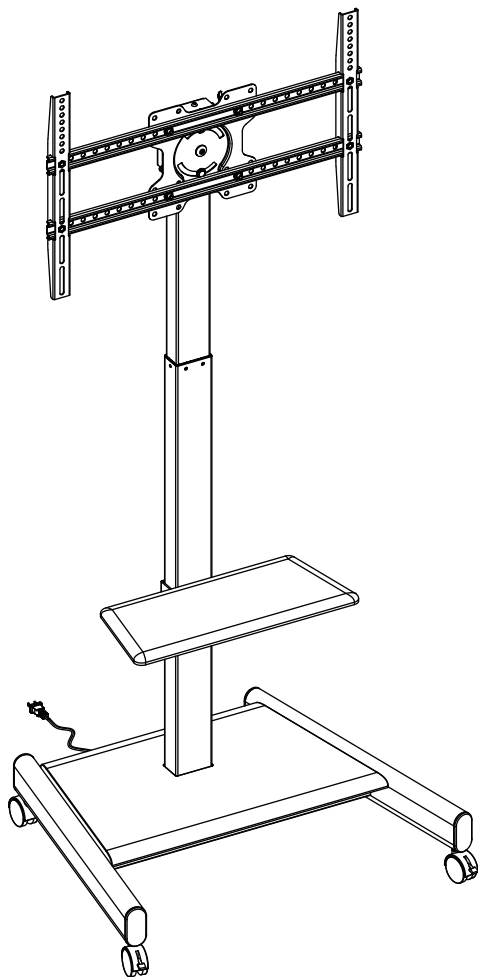




WARNING Read this before you start.


- Do not plug into a powersocket until the manual says so. This is important for proper matching remote control and receiver (see page 15).
- Secure the TV stand's tilt system properly before placing the TV. This is indicated in the manual and prevents unwanted tilting of the TV and TV stand.

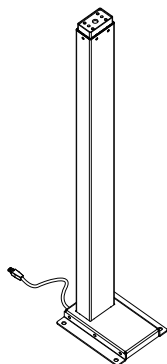


A (x1)

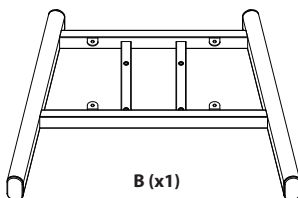 


B (x1)

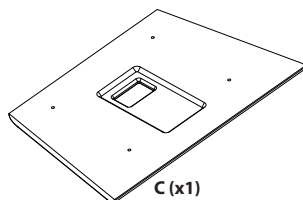 


C (x1)

 


D (x1)

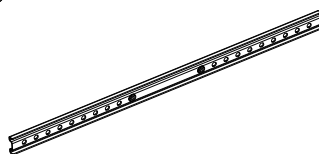 


E (x2)

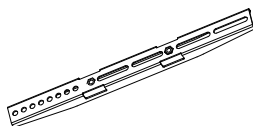 


F (x2)

 

G (x1)

 

H (x1)

 


I (x1)



J (x2)



 K (x2)




L (x1)



M (x1)



 N (x1)



O (x1)



P (x4)



Q (x10)



R (x4)



S (x4)



T (x4)



4mm (x1)
U



6mm (x1)
V



W (x10)



10mm (x1)
X



 
14mm (x1)
Y



M5x14 (x4)
M-A



M6x14 (x4)
M-B



M6x30 (x4)
M-C



M8x30 (x4)
M-D



M8x50 (x4)
M-E



(x4)
M-F

 


(x8)
M-G




(x8)
M-H



1

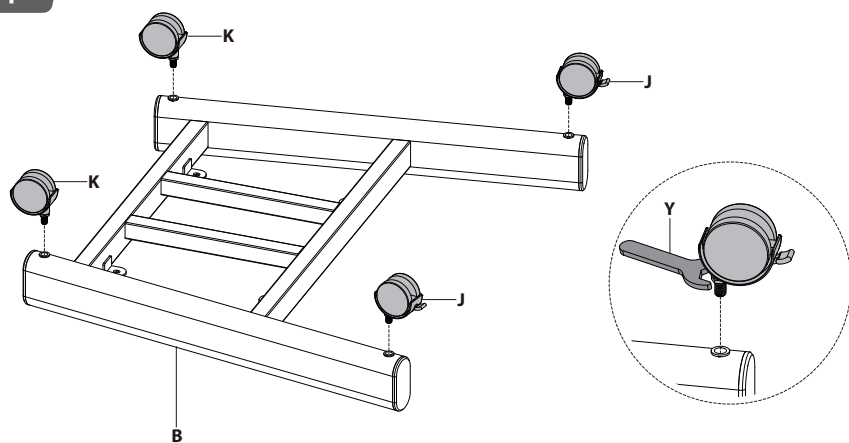



2

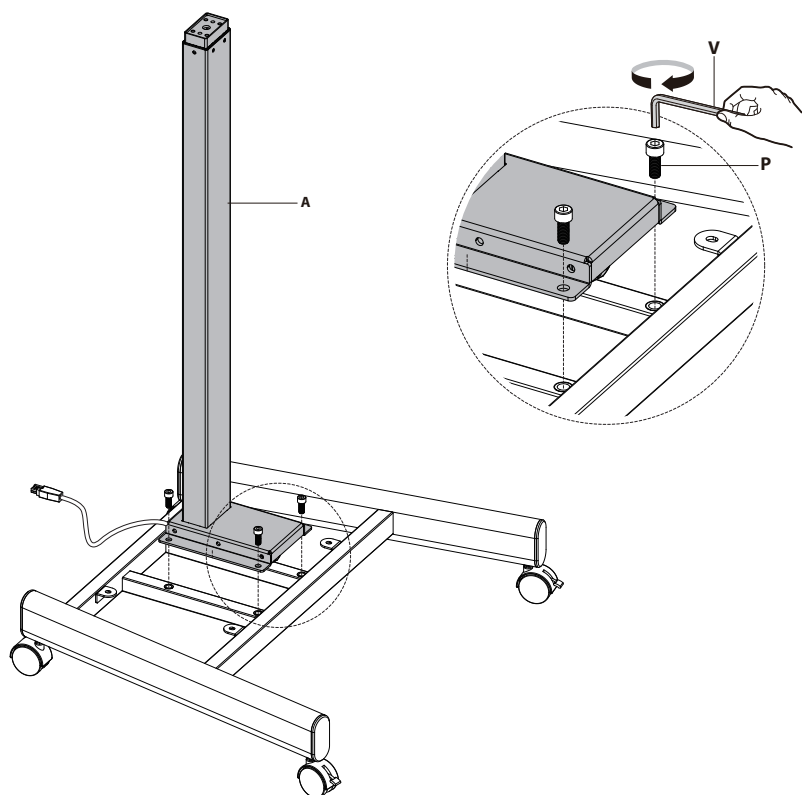 



3

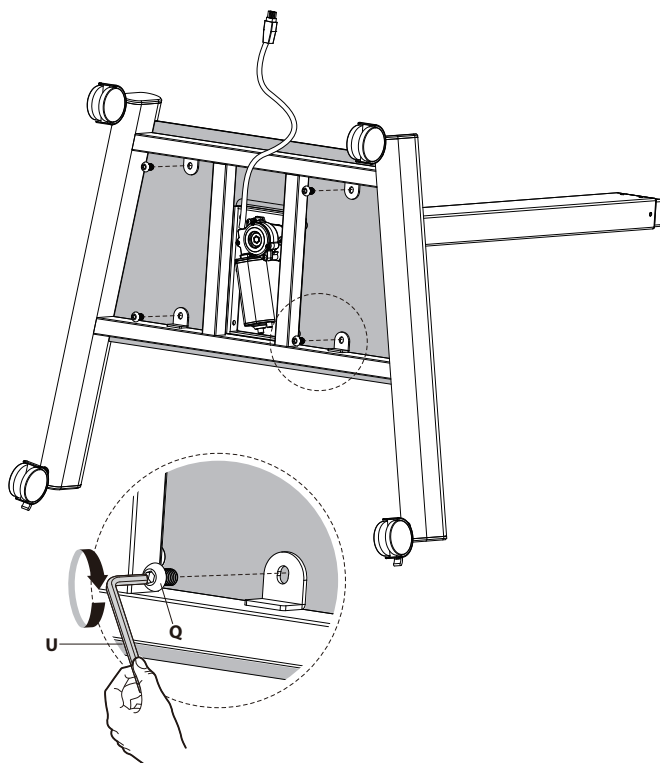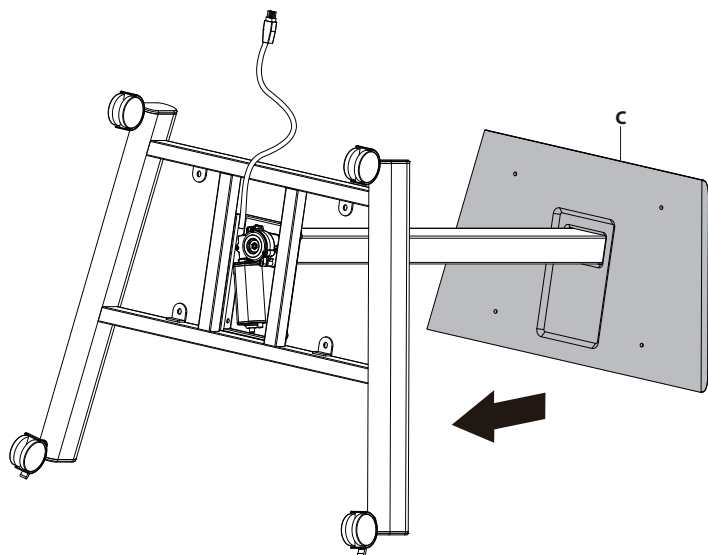  

  
Perform the matching remote and receiver procedure from page 14.

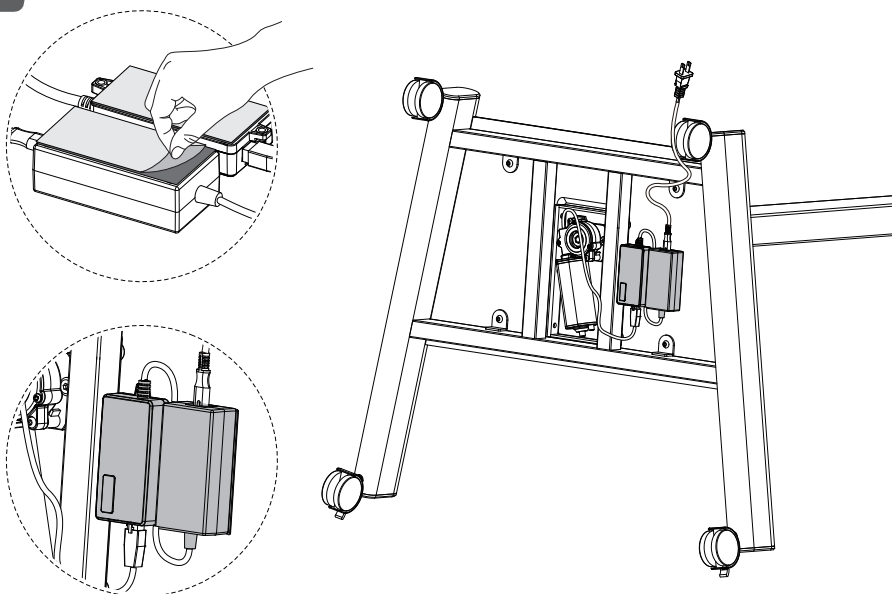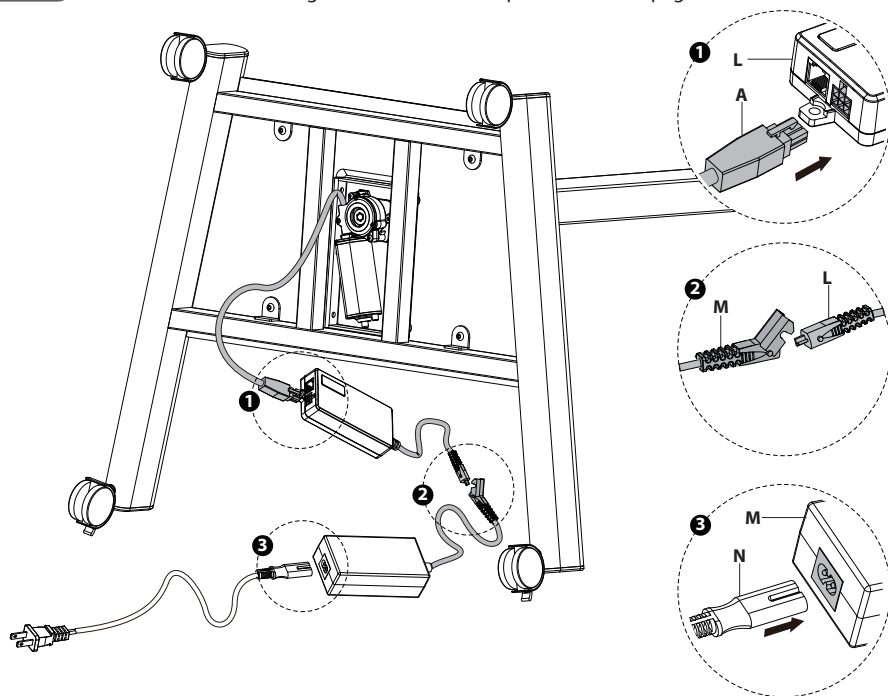


Secure the TV stand's tilt system

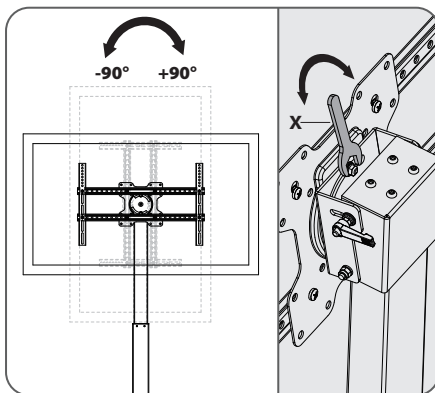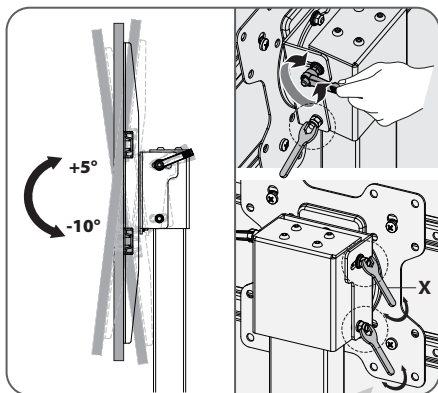  


  If the TV cannot hold still,
please kindly tighten these
3 screws.


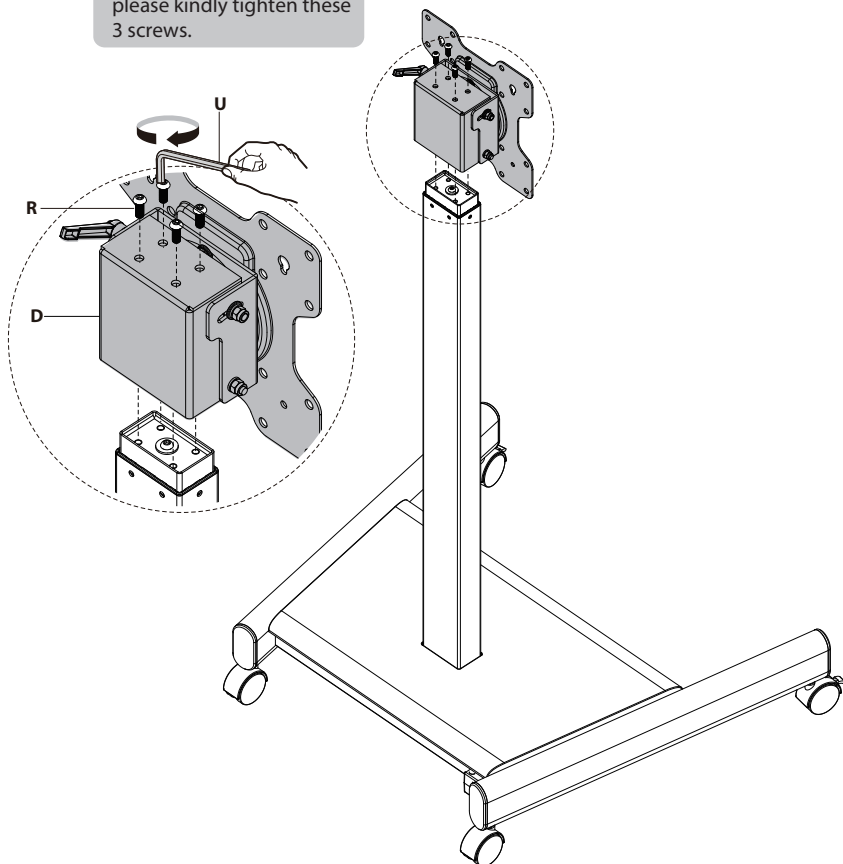


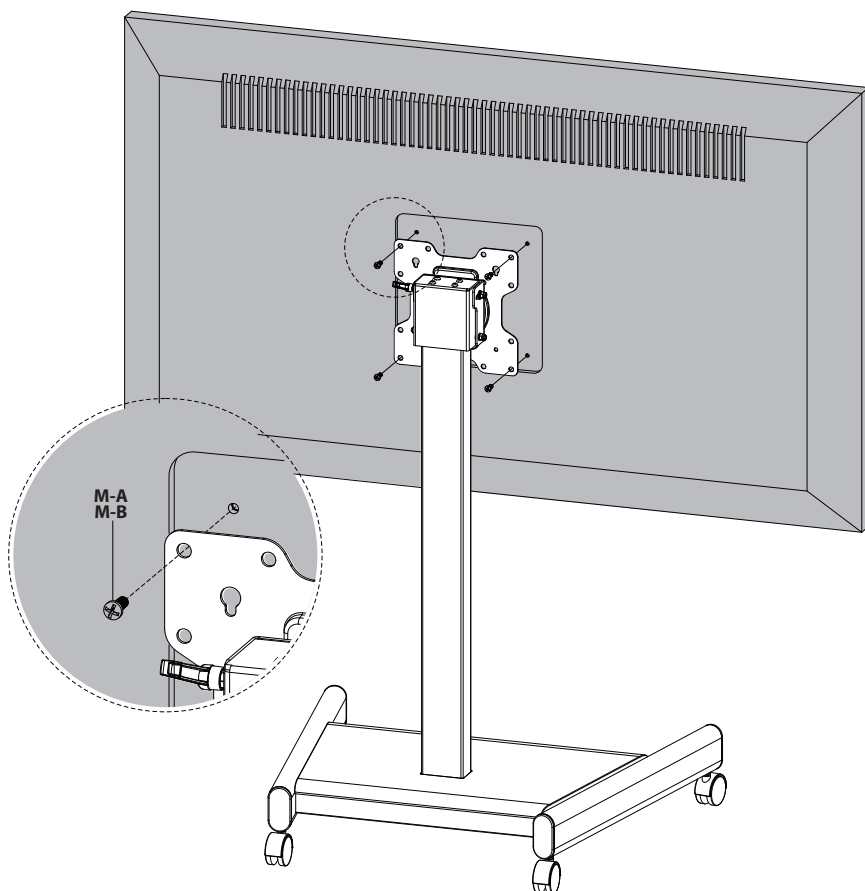








7b-1

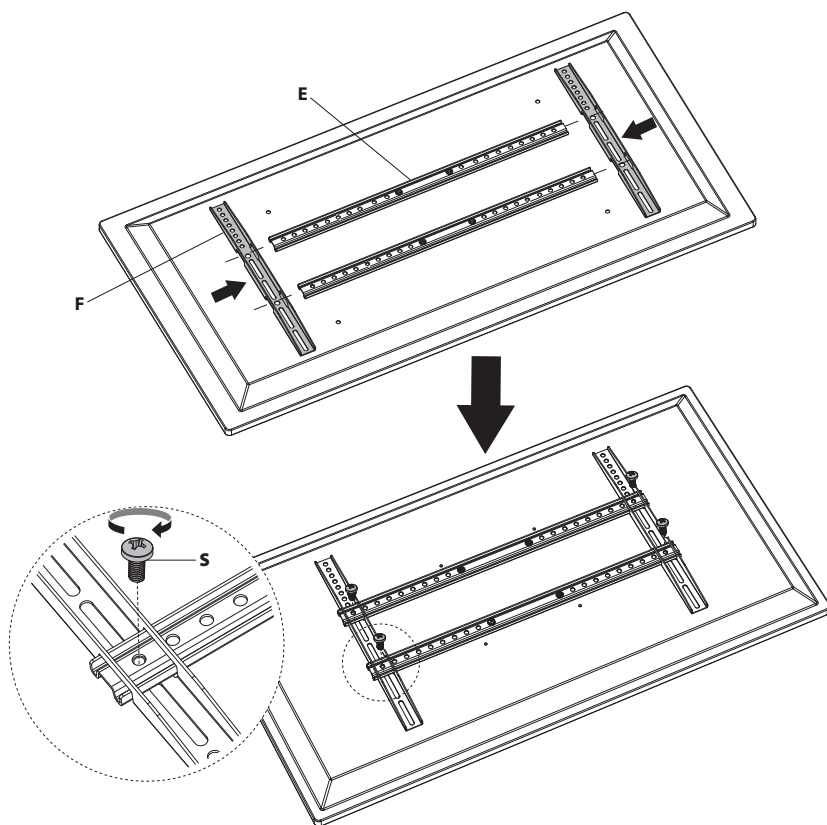 




7b-2a


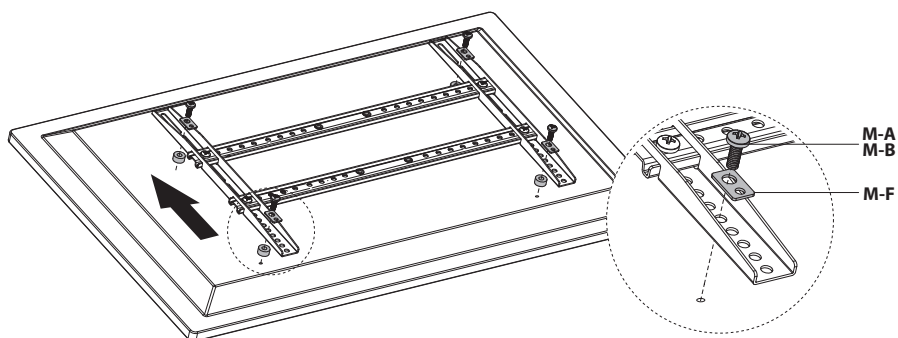 
 




7b-2b

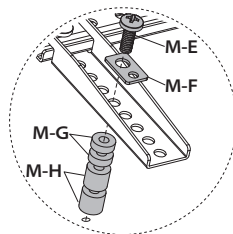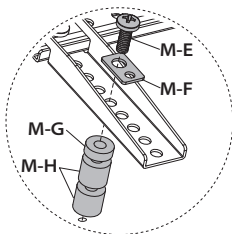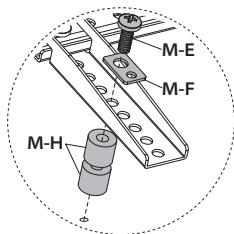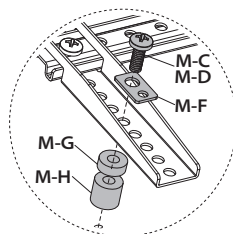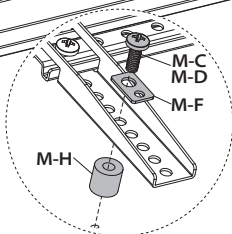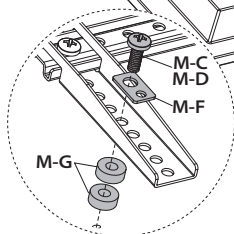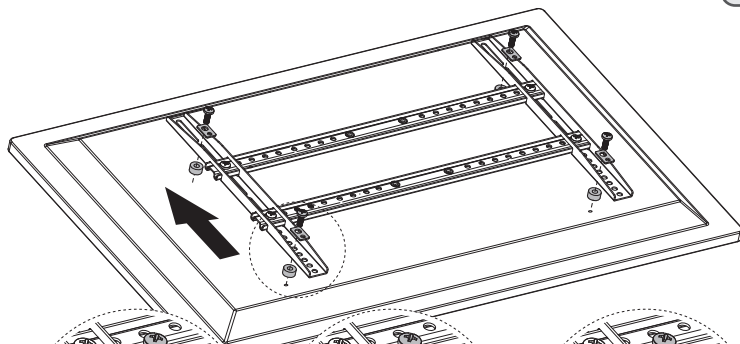       


7b-3

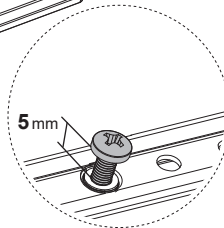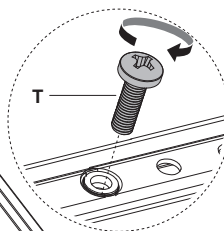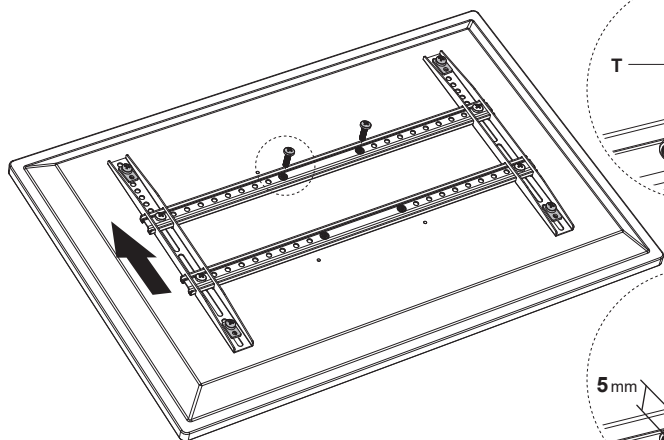   


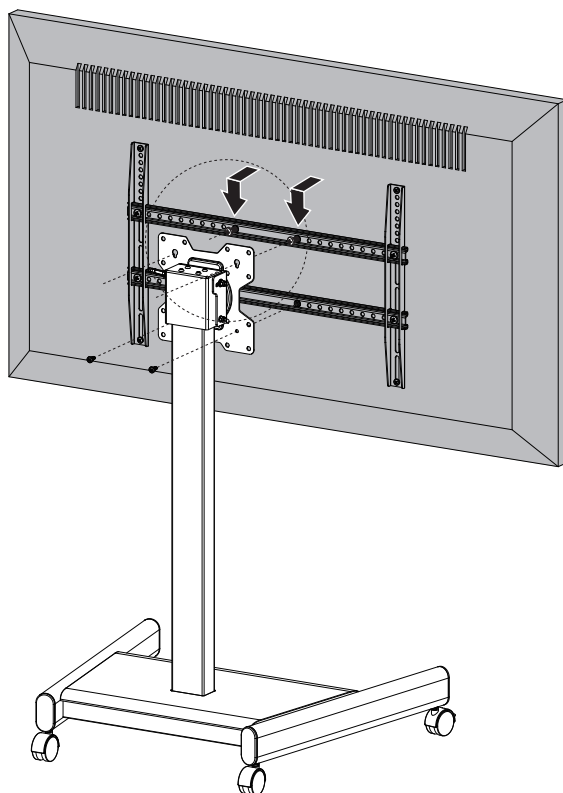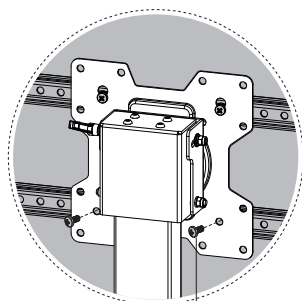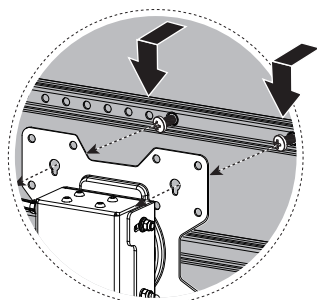   


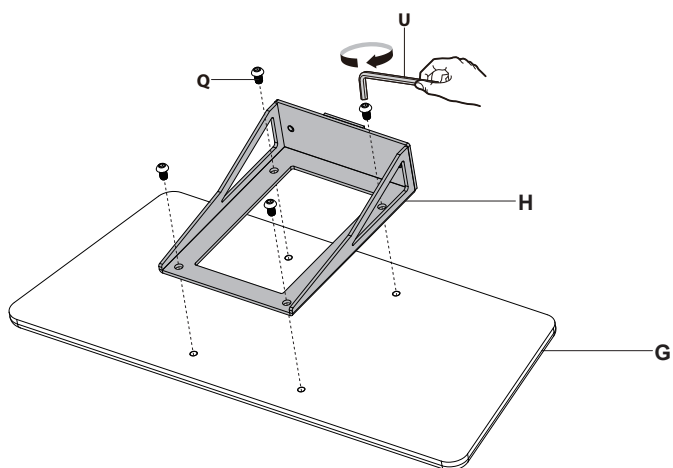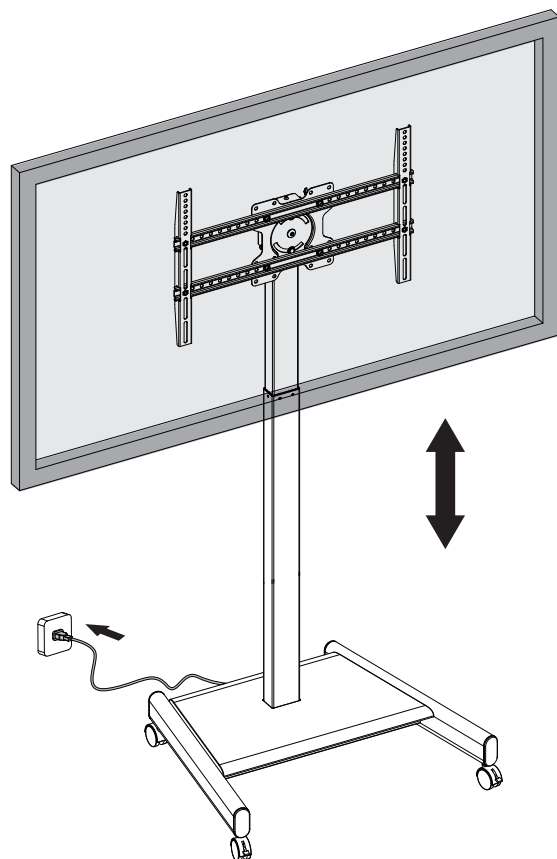  

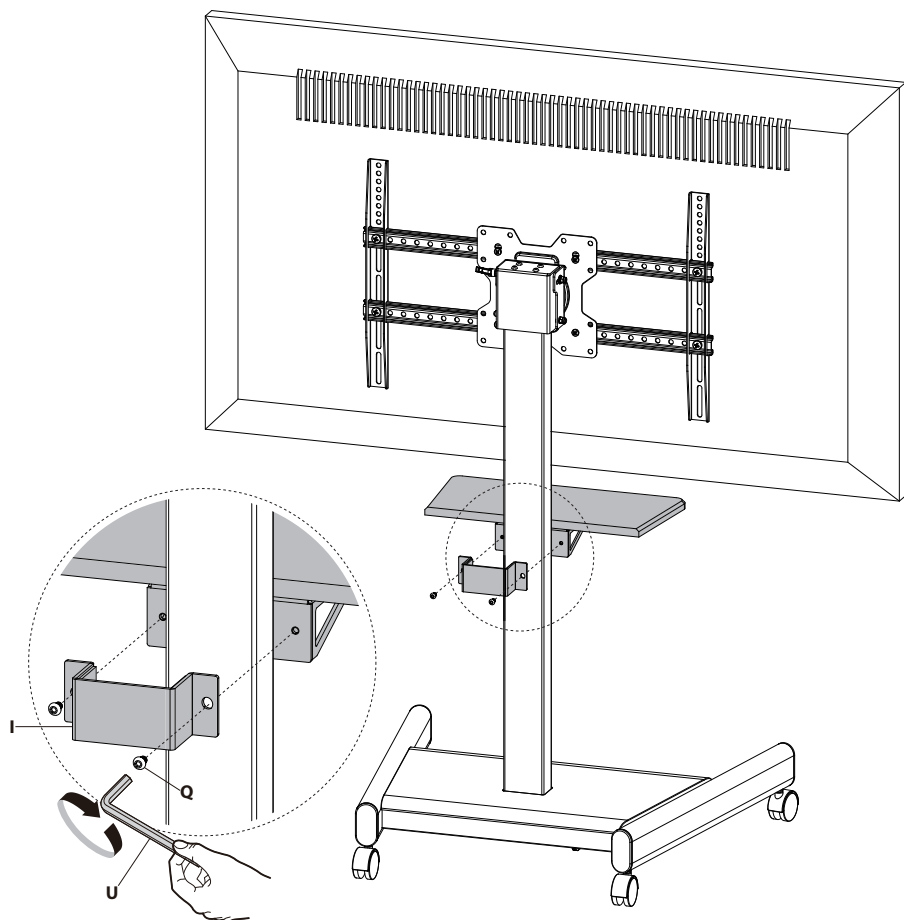 
**Note:**

  Please install the tray after the TV is raised or lowered to the appropriate height to avoid the tray being too close to the TV to affect user experience.

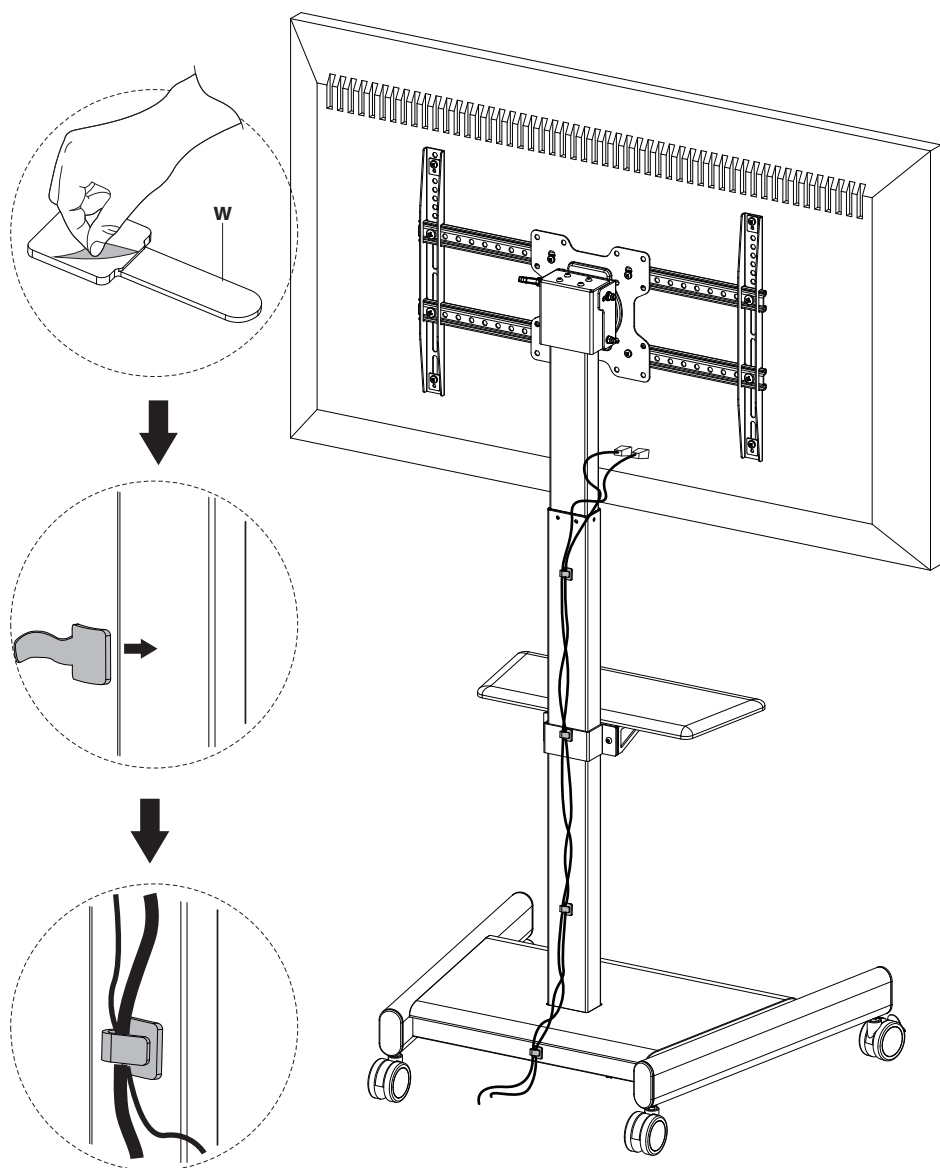

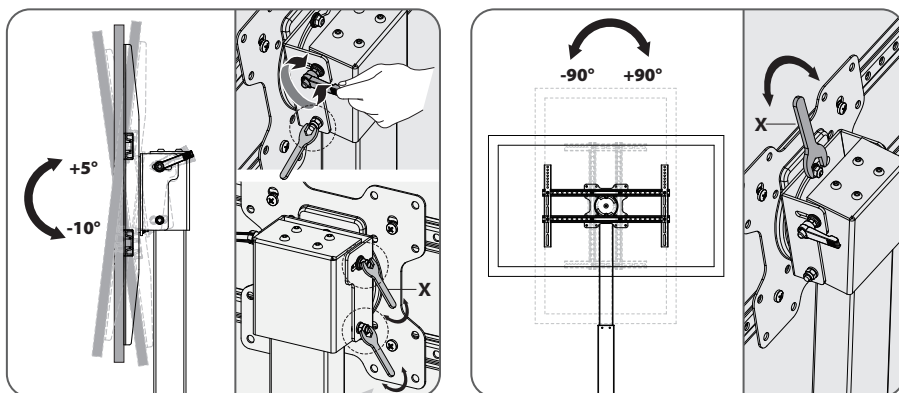

 If the TV cannot hold still,
please kindly tighten these
3 screws.

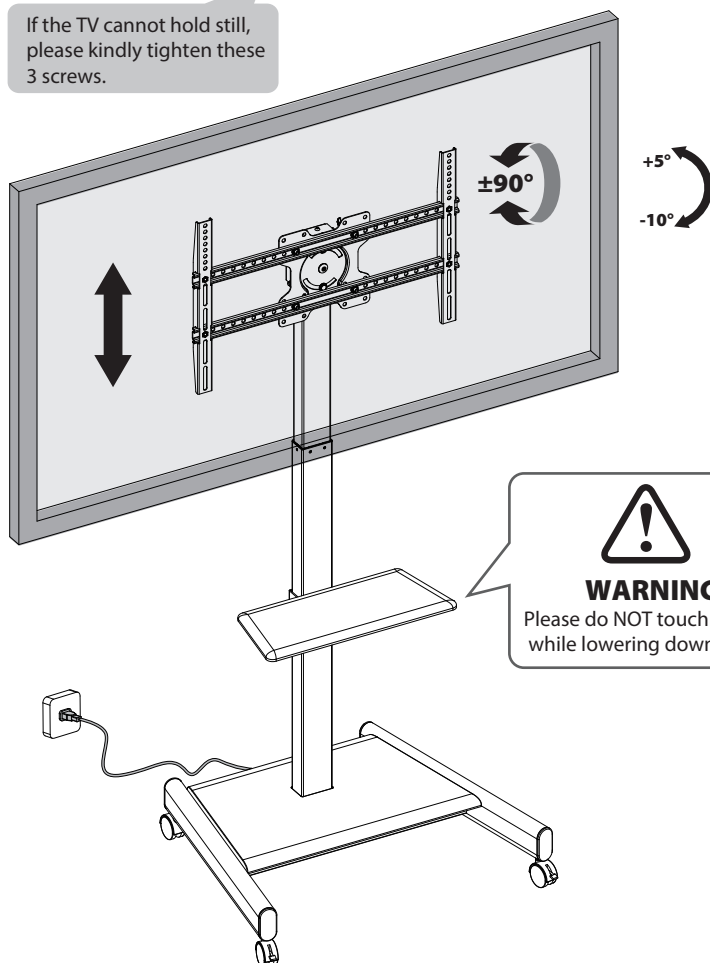

WARNING

Please do NOT touch the tray
while lowering down the TV.

Remote Control Manual

Matching

While using the product for the first time, please do the matching operation.

First, please make sure the product is unplugged, long press "**SET**" button for at least 2 seconds to enter the code matching state. Then plug in the power plug while still pressing the "**SET**" button, and complete the matching operation.

Do above steps again to clear the code.

Reset

When the lifting leg is stopped, long press and hold the "**RST**" button on the remote control for 3 seconds, the driver will emit a long beep, indicating that it will automatically enter the reset state, the lifting leg will automatically drop to the lowest end and rebound 1cm, and the driver will emit two long beeps., indicating that the reset is complete.

Height adjustment

Press the "**Δ**" and "**▽**" buttons on the remote control to adjust the height of the lifting leg;

Short press the "**HOME**" button, the lifting leg will automatically return to the lowest position, and press it again to stop running.

Location memory

Long press the "**M1**" button or "**M2**" button on the remote control for 3 seconds, the drive will emit a long beep, indicating that the current position is successfully memorized;

Short press the "**M1**" or "**M2**" button, the lifting leg will automatically move to the memory position;

