




CM2001 INSTALLATION INSTRUCTION

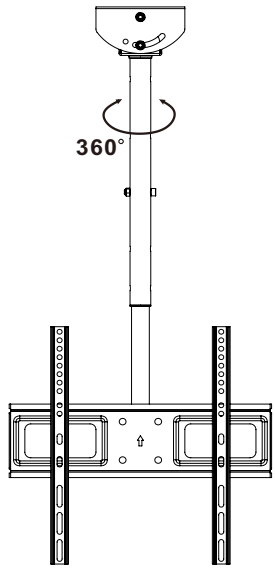


Package A			
(A1)M6x12 (4)	(A2) M6 (4)	(A3)M6x15 (4)	
(C1)M8x16 (2)	(C2) M8 (2)		
Package B			
(D) M6x14 (4)	(E)M8x20 (4)	(F) M4(1) M5(1) 10x13(1)	(G)5mm (4)
(H)M8x60 (6)	(I)10x50 (6)	(J1)M8x16 (8)	(J2)M6x16 (4)

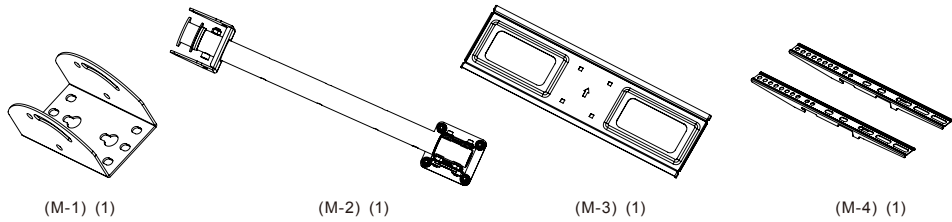


STEP-1

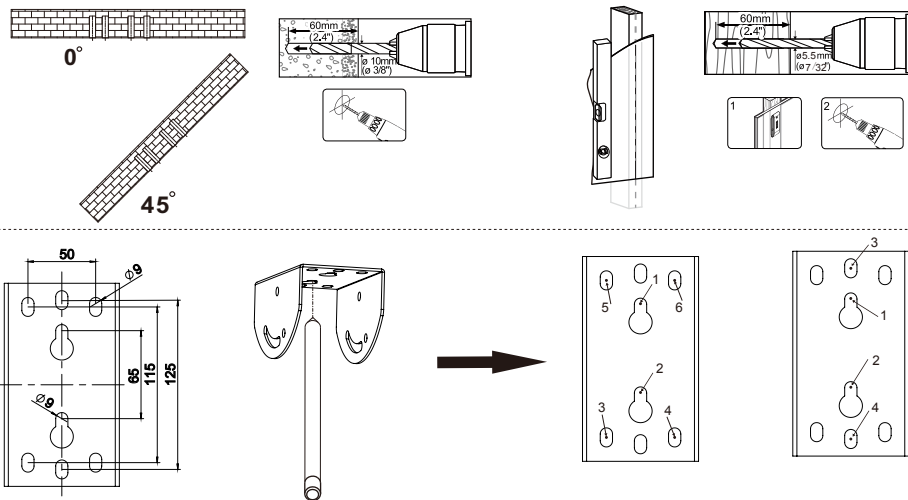


STEP-2

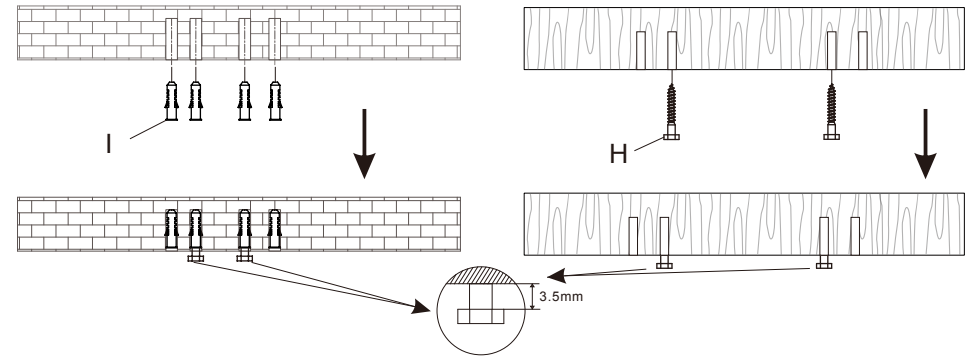


STEP-3

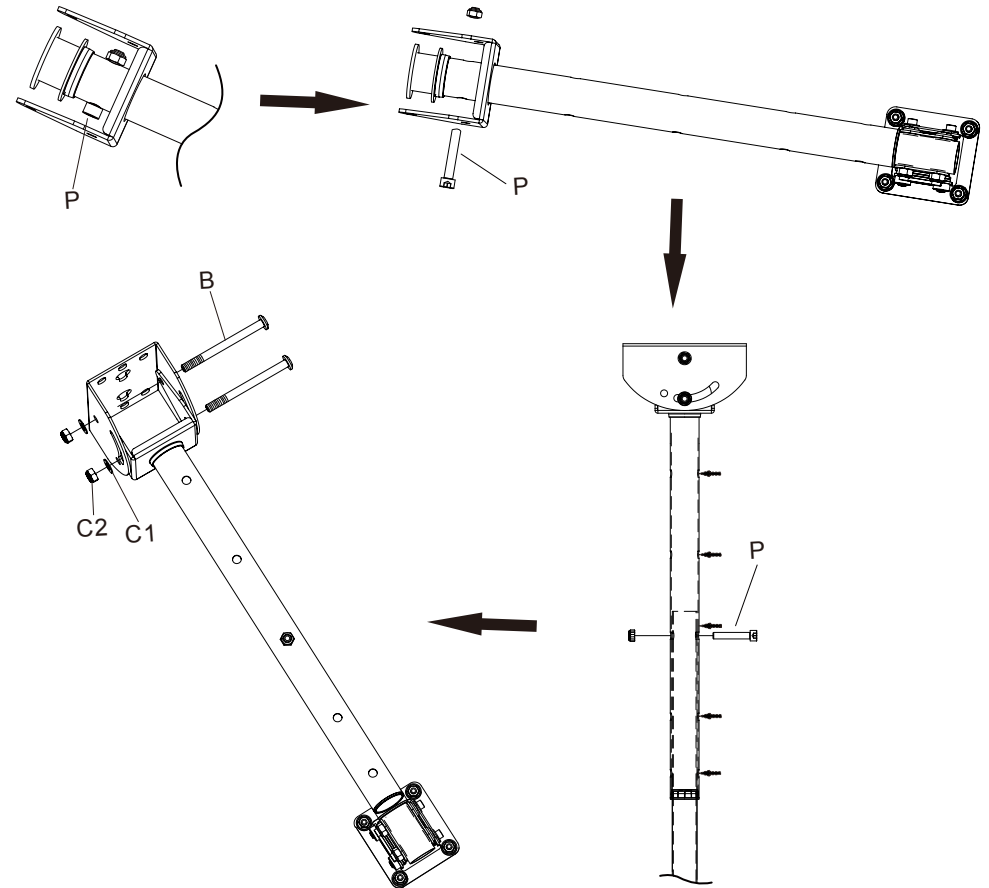


STEP-4

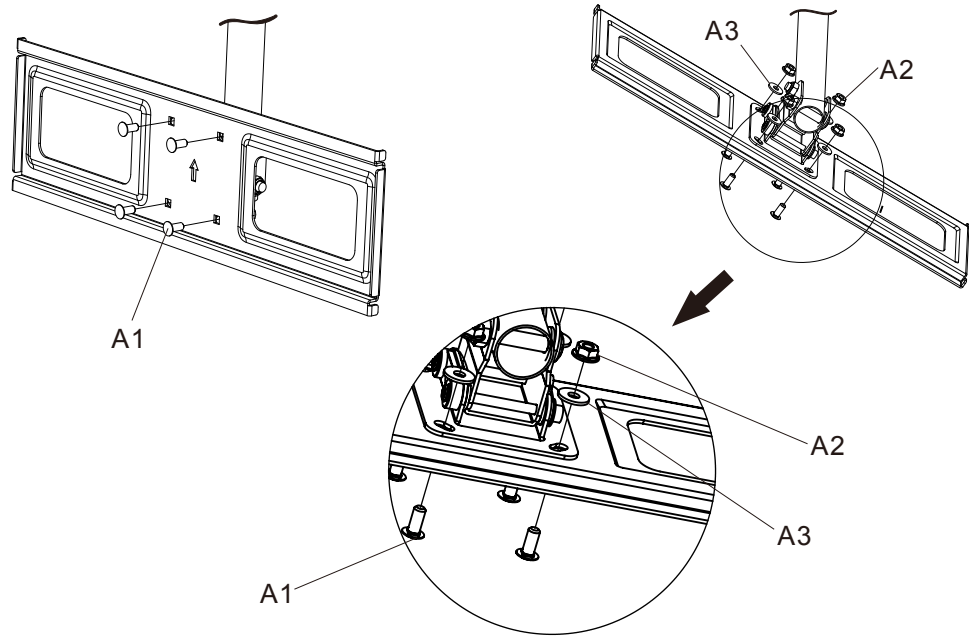


STEP-5

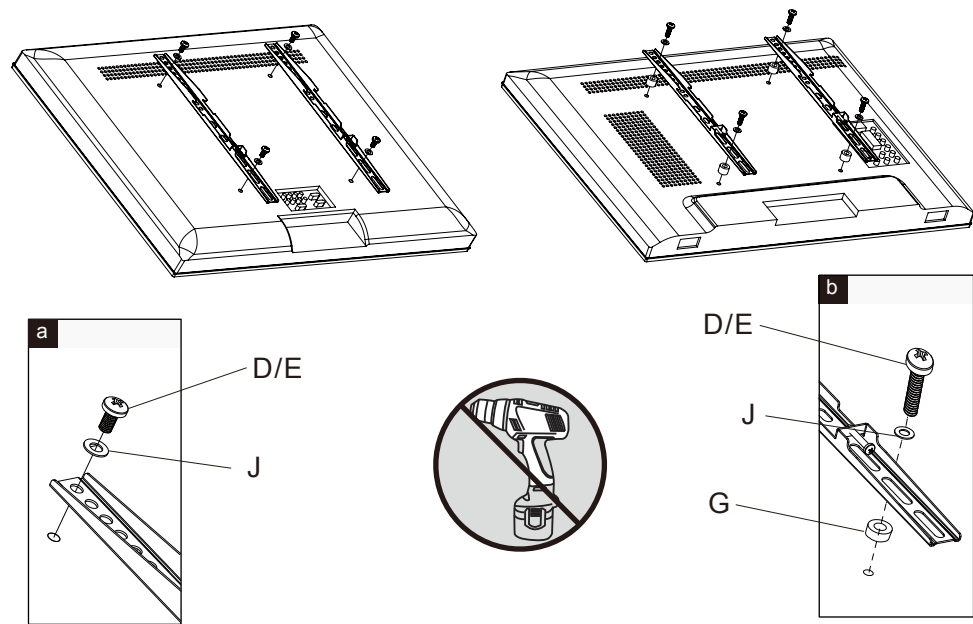

STEP-6

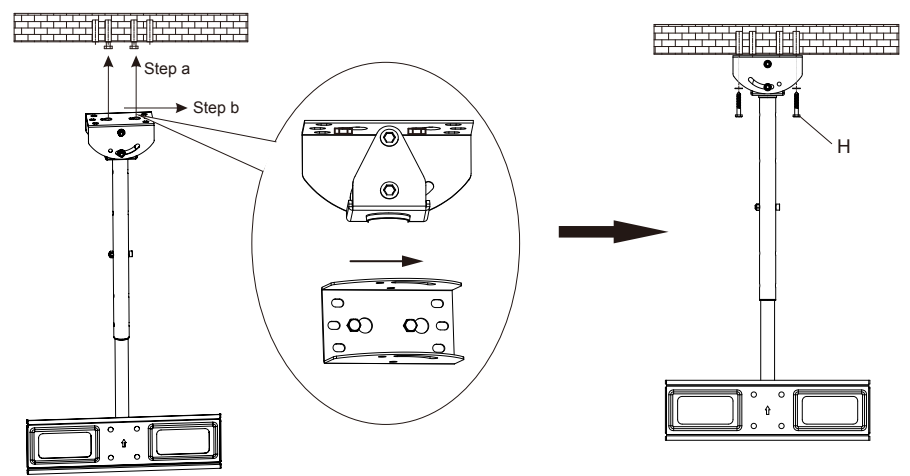

STEP-7

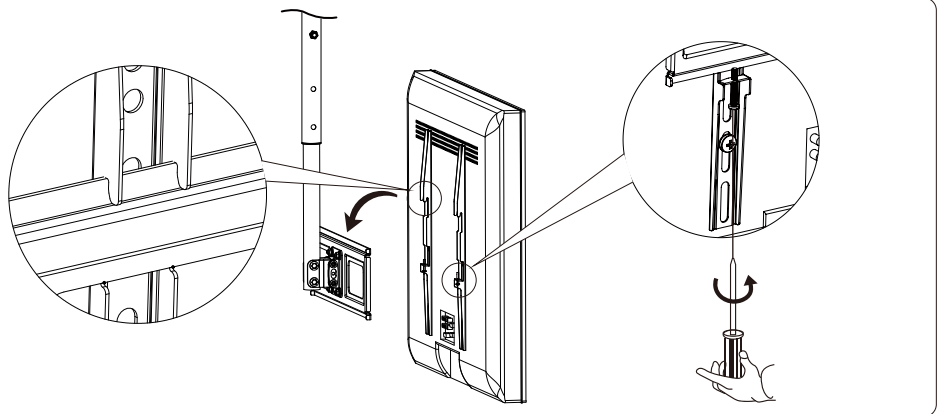

STEP-8

